 




KONICA MINOLTA

bizhub C450/C352/C351

Shortcut Manual

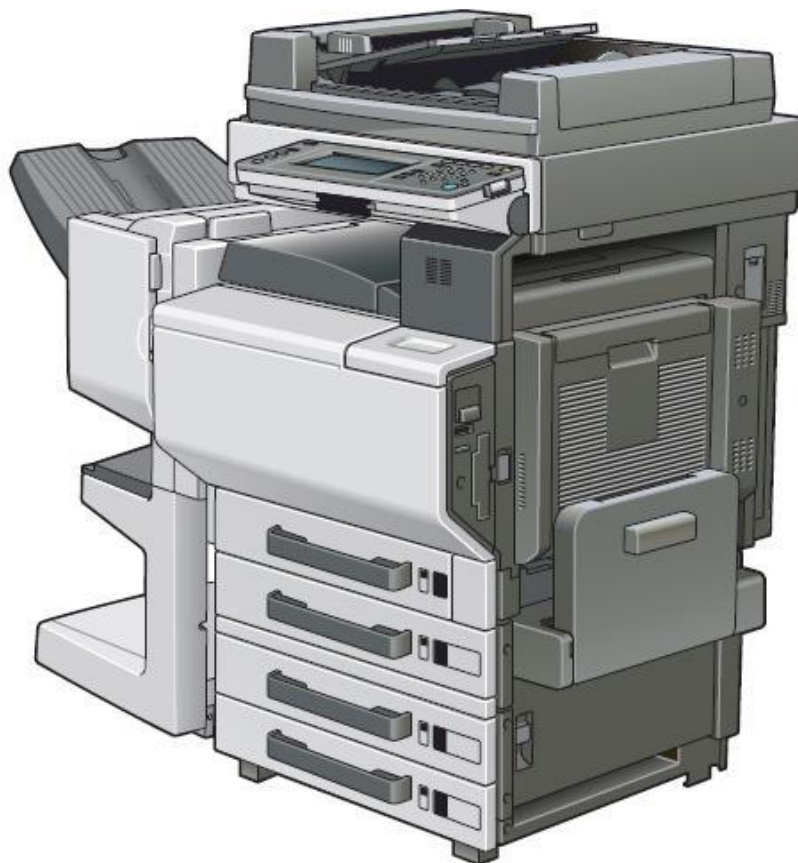 


For detail information , Please refer to the User Manual




KONICA MINOLTA

C450/C352/C351 Shortcut Manual

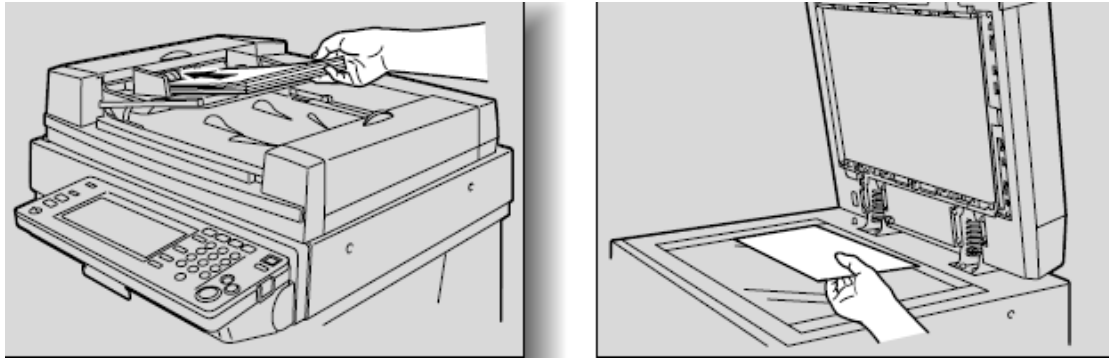

 Place Originals on the Feeder(Face Up) or/ On the Original Glass (Face Down)

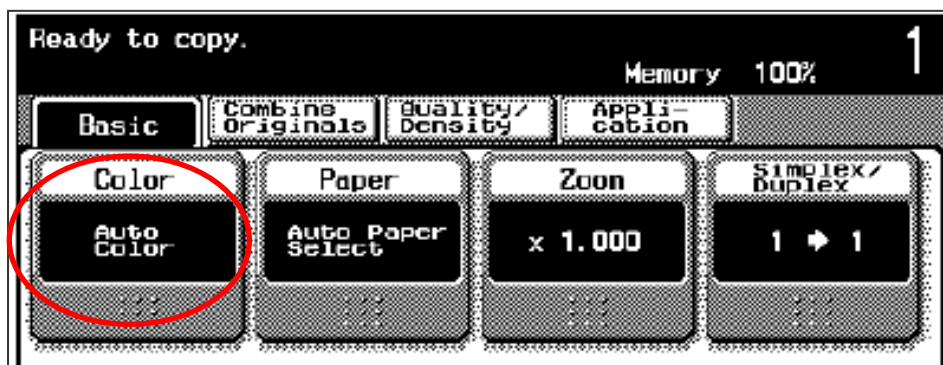

Basic (I)

-- Color Mode

1. Press **Black** to make copy in Black & White
2. Press **2 Color**, then the areas of the scanned document, except the black will be kept unchanged, others will be changed to the selected color

(Red/Yellow/Blue/Magenta/Green)



 
 
 
3. Press **Single Color** – the areas of the scanned document will be changed to the selected color

The essentials of imaging

Basic (II)

Change Paper Size

- 1 Press **Basic** & then **Paper**
- 2 Select the 1st Cassette /Bypass Tray
- 3 Press **Change Tray Settings**
- 4 Select the Paper Size
 - a Press **Standard Size** to select A4/A3... etc /or
 - b Press **Custom Size** input the length (X) & width (Y)
- 5 Press **OK**

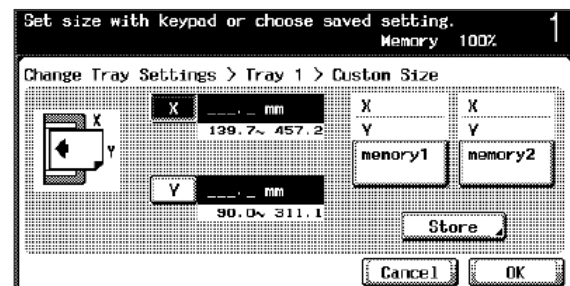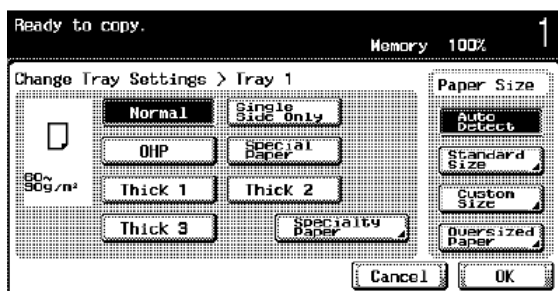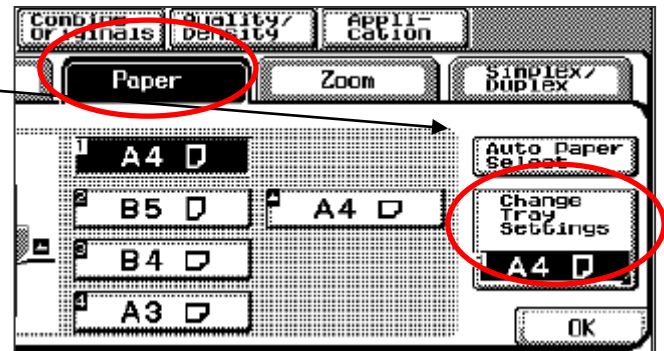


Basic (III)

-- Zoom



Reduce Size /Enlarge Size

 Press **ZOOM**

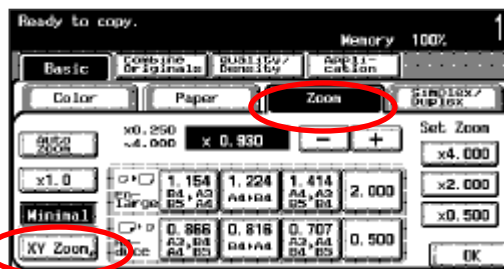

- 1 Select the Standard Zoom Ratio
 - a For example, A3 reduce to A4 size

  Press **A3 ▶ A4**

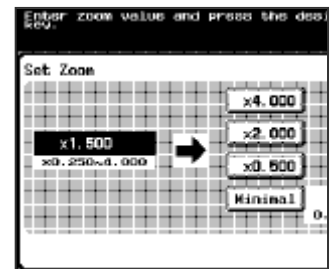
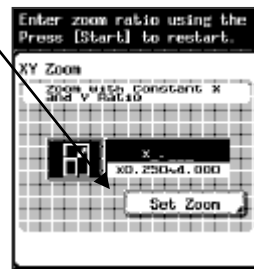


- b Or Press **XY Zoom** & then press **Set Zoom** to input the zoom ratio directly , & then **OK**

Offset— sorted into complete sets

1. Press **Finishing**
2. Press **Offset**

  
If no finisher is installed, the copies will be offset like the picture below

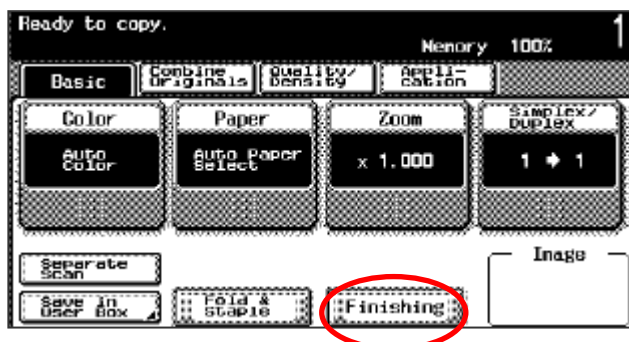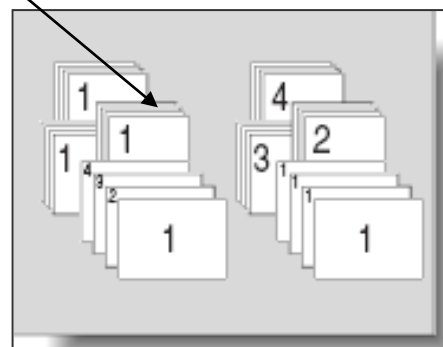


Basic (IV)

--Making Simplex (1-sided) / Duplex Copies (2sided)


 
Press **Simplex** / **Duplex** to select

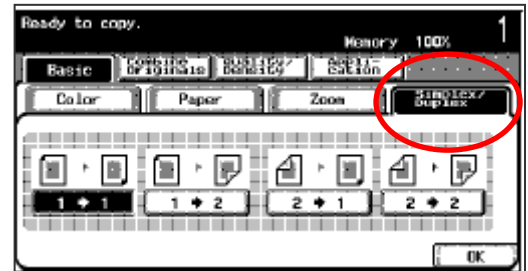


 
a. Single-sided original to Double-sided Copy **1 to 2**

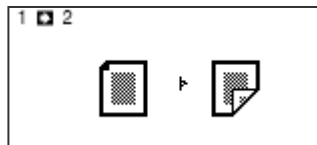

  b. Double-sided Original to make Single-sided copy **2 to 1**

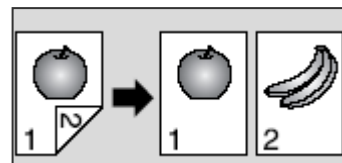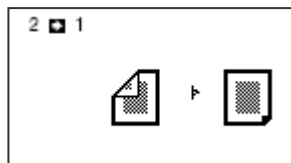

  
c. Double-sided Original to make Double-Sided Copy **2 to 2**

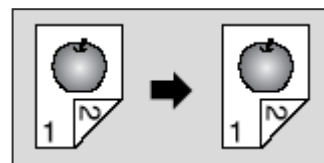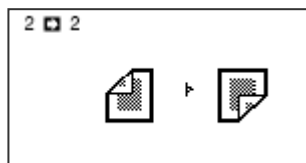

A. Combine Originals (I)

-- to reduce the size from 2/4/8 sheets originals into 1 sheet of copy

 Press **Combine Originals** & then select **2in1** , **4in1**

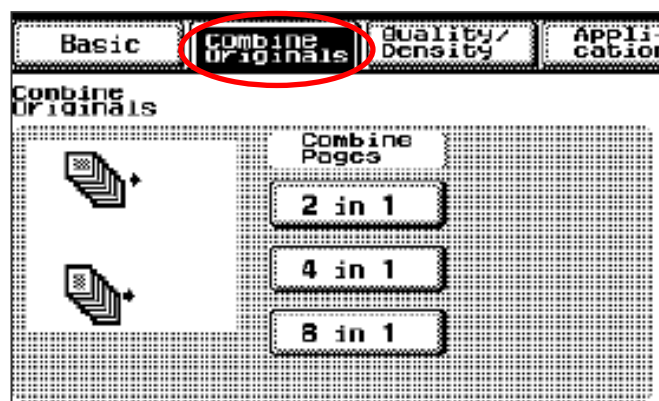


Application





Sheet / Cover /Chapter Insert

 1. Press **Application**
2. Press **Sheet /Cover /Chapter Insert**
3. Press **Cover Mode**
4. Select whether making copy on the Front Cover, if yes, select **Front Copy**
5. & select the cover cassette
6. Press **OK**
7. Press **Start**

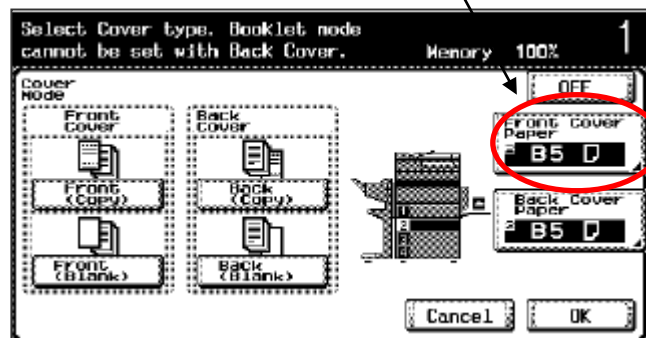



KONICA MINOLTA

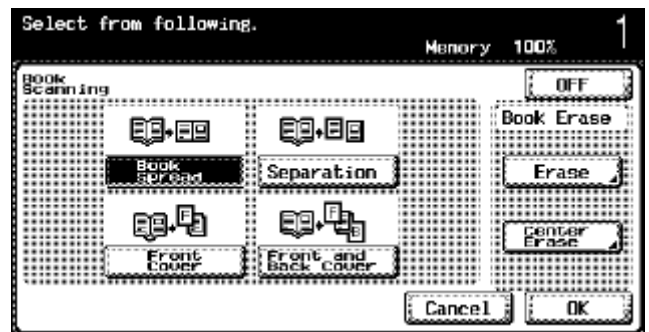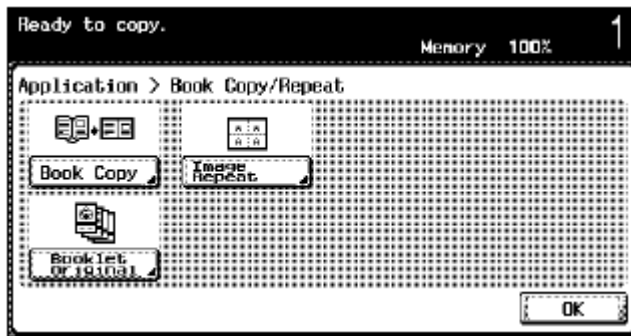  


Book Copy

1. Press **Application**
2. Press **Book Copy / Poster / Repeat**
3. Press **Book Copy**
4. Press **Separation**
& **Front Cover/Back Cover**
5. Open the book & place it onto the original glass , Press **Start** to scan
6. Until all pages have been scanned , Press **Finish**
7. & then Press **Start**

Image Repeat

 1. Press **Application**
2. Press **Book Copy / Poster / Repeat**
3. Press **Image Repeat**
4. Press **With Margin / Without Margin**
5. Press **Set Range**
6. Press **Custom Size** , input the length (X) & the width (Y)
7. Press **OK**
8. Press **Start**

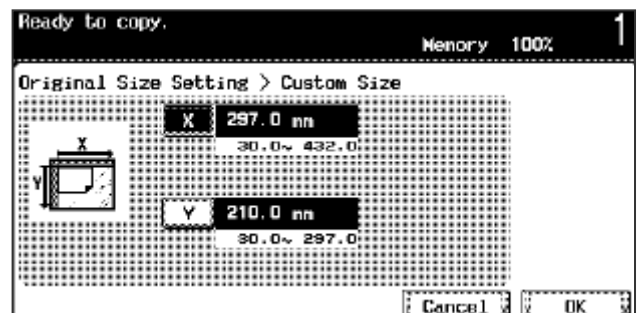


The essentials of imaging

Page Margin

1. Press **Application**
2. Press **Page Margin**
3. Select the position for making margin
4. Press **OK**
5. Press **Start**


II. Erase

 1. Press **Application**
2. Press **Erase**
3. Select the position
4. Press **OK**
5. Press **Start**

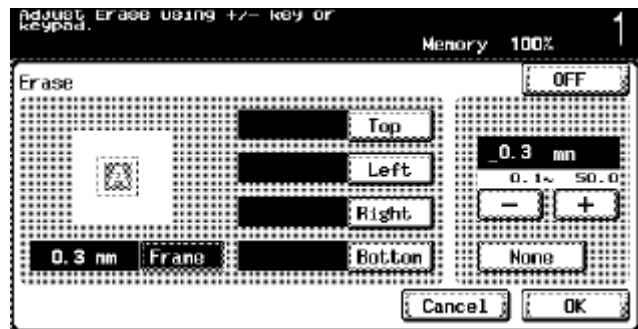



Booklet Pagination

 1. Press **Application**
2. Press **Booklet Pagination**
3. Press **Start**

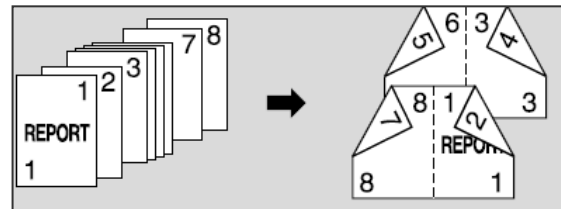


III. Image Adjustment

  1. Press **Application**
2. Press **Image Adjustment**
3. Press **Centering**
4. Press **Start**

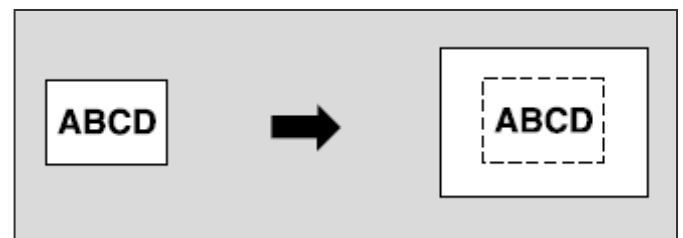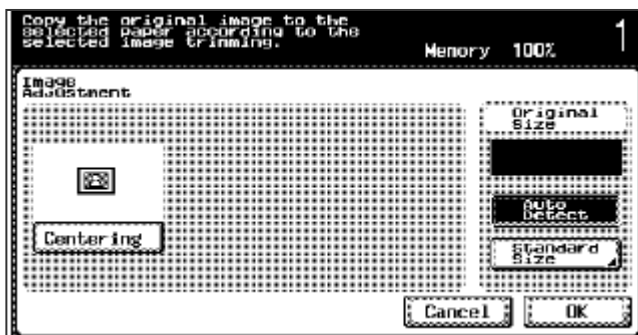


Date / Time

 1. Press **Application**
2. Press **Stamp**
3. Press **Date /Time**
4. Press **Print Position**
5. Press **OK**
6. Press **Start**

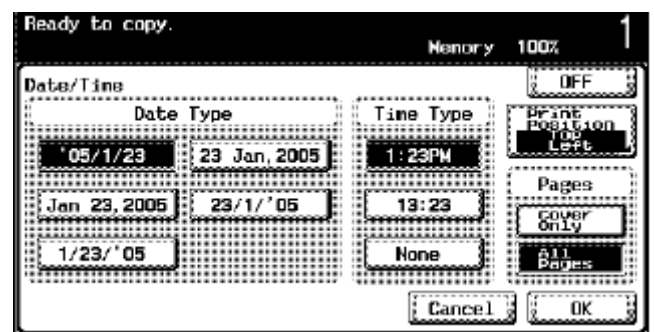


Page

 
1. Press **Application**
2. Press **Stamp**
3. Press **Page #**
4. **Input the start no**
5. Press **Print Position** for different position
6. Press **OK**
7. Press **Start**

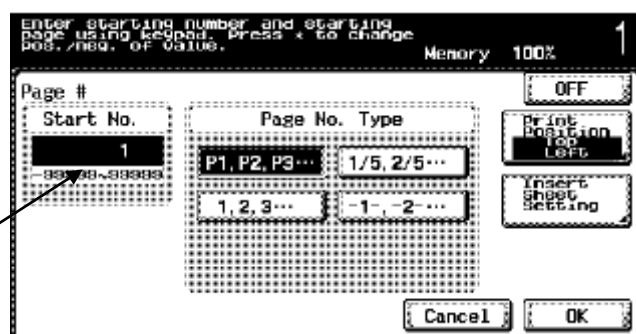

Edit Color

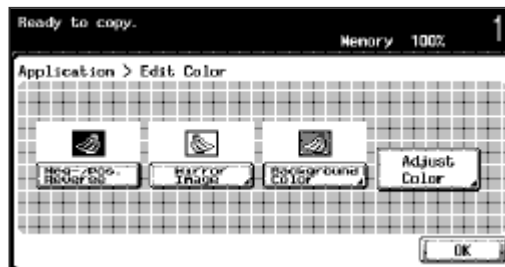 

 1. Press **Application**
2. Press **Edit Color**
3. Press **Neg. Pos. Reverse**

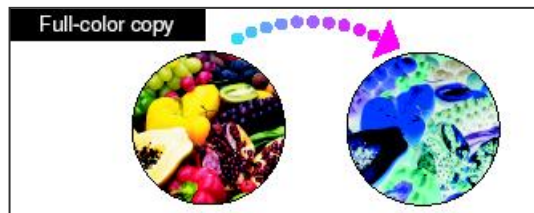


or Press **Mirror Image**



Background Color – turn the background into the color selected

 1. Press **Application**
2. Press **Edit Color**
3. Press **Background Color**
4. Select the background color
5. Press **OK**
6. Press **Start**


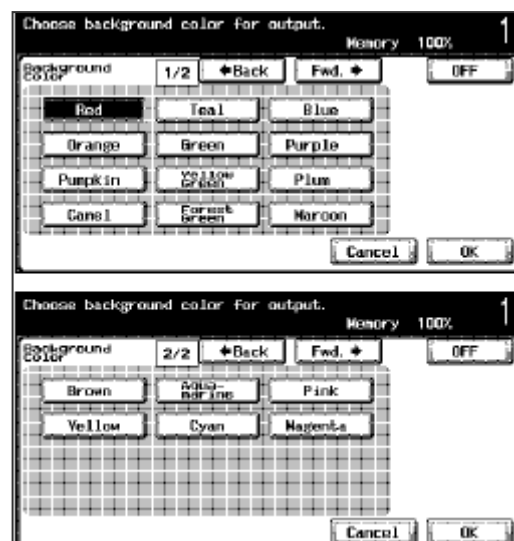




KONICA MINOLTA


A Delete the copy job in the Waiting List

  1. Press **Job List**
2. Press **Print** & then press **Active Jobs**
3. Select the job you want to delete
4. Press **Delete**
5. Press **Yes**

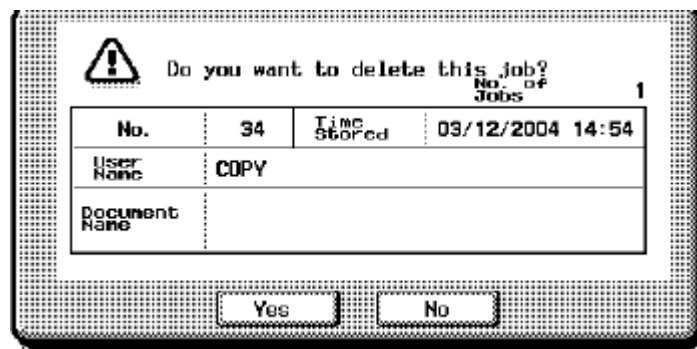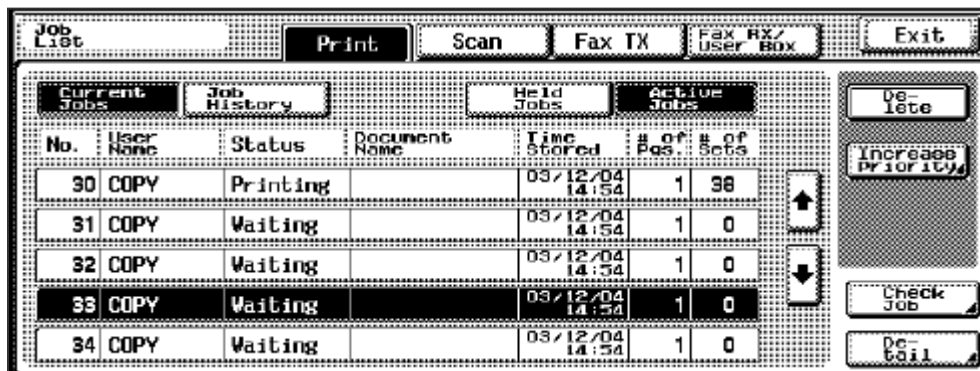

Report the Meter Monthly , After print it , FAX TO 2565 2128

 1. Press **Utility / Counter**
2. Press **Detail**
3. Press **Print**
4. Select Paper Tray
5. Press **Start**

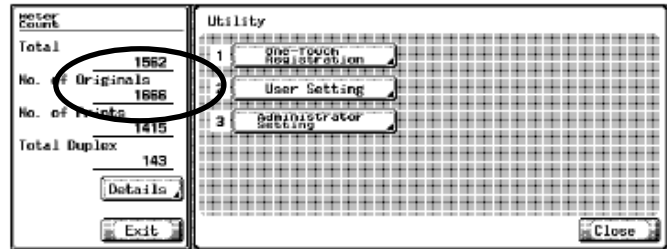

[illegible]

[illegible]



This image shows a full page of white paper with horizontal dashed lines, typical of primary-ruled notebook paper. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings present.



KONICA MINOLTA

部門熱線Particulars	聯絡方法Contact us
市務科 Marketing Division ➤ 銷售熱線Sales Hotlines • 查詢產品及銷售詳情 New Product and Sales Enquires	電話Tel : 2565 2111 電郵Email : bhkg_sales@bhk.konicaminolta.hk
服務科 Technical Service Division ➤ 維修熱線Repair Hotline • 多功能產品之維修服務 MFP Repair Services	電話Tel : 2565 2176 傳真Fax : 2856 1024
服務科 Technical Service Division ➤ 產品之技術支援熱線 • 軟件及網絡支援 Application, Network and System Support	電話Tel : 2565 2178
客戶服務Customer Service Department ➤ 客戶服務熱線 Customer Service Hotlines • 保養合約查詢 Maintenance Agreement • 新客戶之產品培訓 New Customer Product Training • 賬單查詢 Invoice Enquiries • 報錶 (請於報錶結算日前報讀。) Report meter reading through telephone system (Please report meter reading on or before cut-off date)	電話Tel : 2565 2190 傳真Fax : 2565 2128 電話Tel : 2856 4306 電話Tel : 2565 8181 English - Press “2”, then press “2”, 中文 - 按 “1” 字然後按 “2” 字 傳真Fax : 2856 2008 電郵Email : bhkg_csmeter@bhk.konicaminolta.hk
客戶服務 Customer Service Department ➤ 用品供應熱線 Order Section Hotlines • 訂購消耗品如碳粉及影印紙 Ordering of Consumable Products (Toners, Paper, etc...)	電話Tel : 2565 2139 傳真Fax : 2565 7613 電郵Email : bhkg_csorder@bhk.konicaminolta.hk
財務科 Finance Division ➤ 月結單查詢 Statement Enquiries	電話Tel : 2856 4710 傳真Fax : 2516 9177
行政科 Administration Department ➤ 客戶的建議及意見反映 Other Suggestions & Comments	電話Tel : 2565 8181 按Press “ 0 ”
網上客戶服務 Online Support Services	http://www.konicaminolta.hk/hk/zh-hk/customer-services.php http://www.konicaminolta.hk/hk/en-us/customer-services.php